


Offer the cable reel holder upto the end panel etc. Mark and drill two 6.5mm holes and fix as per the diagram, with the large washer(6) next to the nyloc nut.

Also included in the kit are 2 self drilling screws(7) to use if you are not able to locate the ends of the bolts.

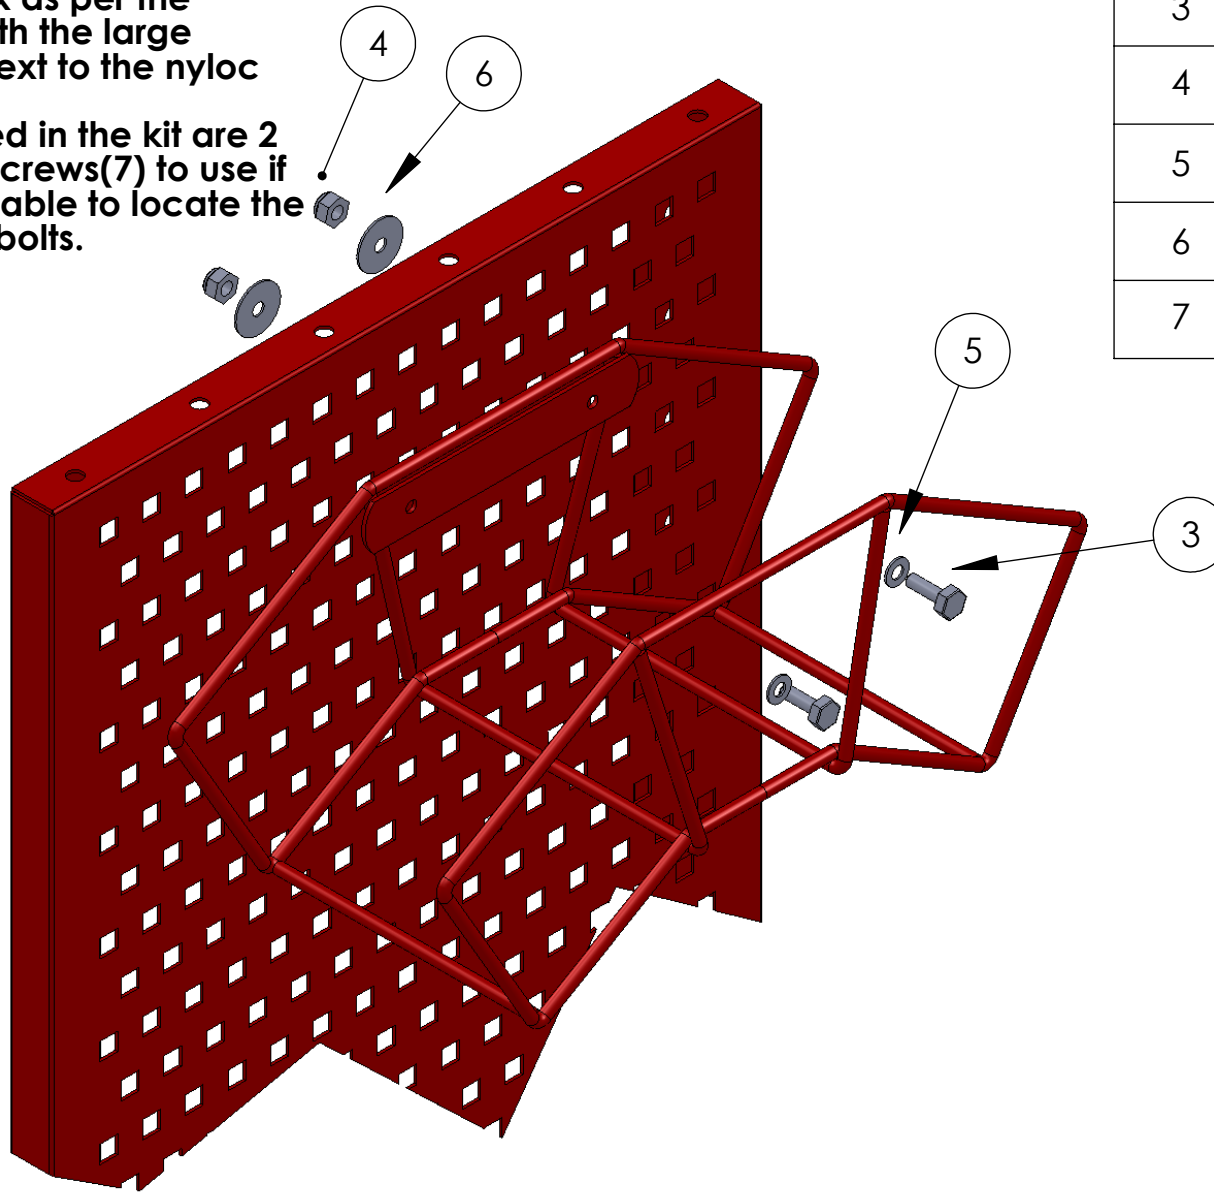

ITEM NO.	PART	QTY.
3	M6x12mm bolt	2
4	M6 P Type nyloc nut	2
5	6mm Form A washer	2
6	6mm x 25mm washer	2
7	5.5mm x 19mm self drilling screw	2

TITLE:

Cable reel holder fitting instructions

Bolt Kit blk006