


The sliding vice beam is fastened to the floor of the vehicle with either the M8 x 45 bolts(2) with the 50mm washer underneath(if the location of the fixing holes allows) or alternatively the M6 x 40mm self-tapping bolts(3) may be used

Extreme caution must be exercised when drilling through the floors to avoid brake pipes , fuel lines etc.

The retaining bolt(8) must be fitted once the vice is installed , for safety reasons.

ITEM NO.	PART NUMBER	QTY.
1	M8x45mm bolt	4
2	6mm x 40mm hex bolt self tapper	4
3	M8 T Type nyloc nut	5
4	8mmx25mm washer	6
5	8mmx50mm washer	4
6	6mmx25mm washer	4
8	M8x20mm bolt	1

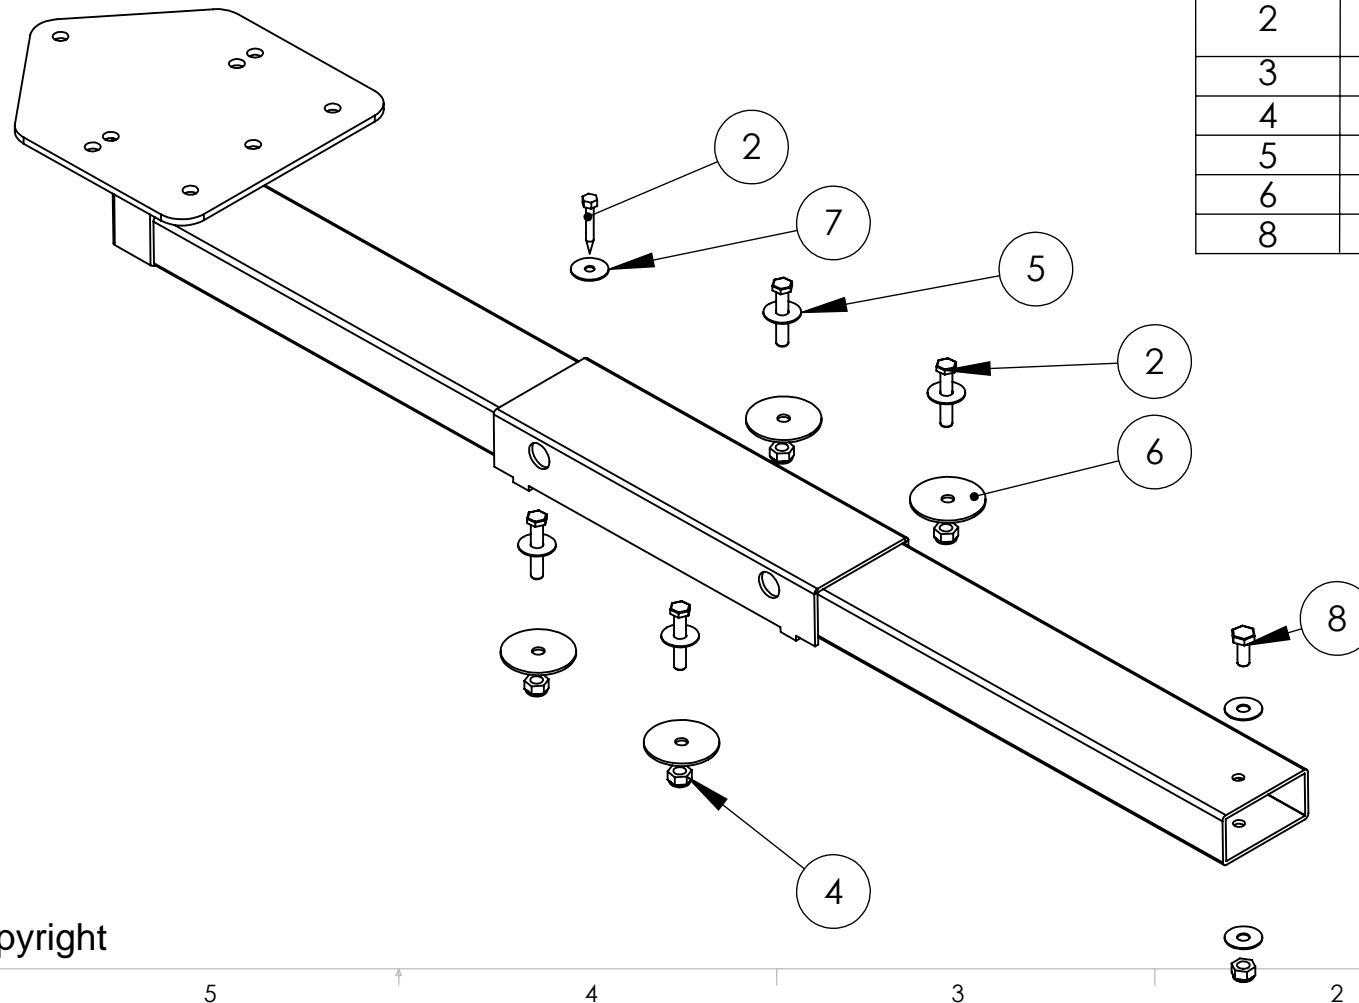

TITLE:

Sliding vice beam fitting instructions

Bolt kit: blk012